




Natural Stone, Beautiful Home

How to fit ThinStone

Tools needed

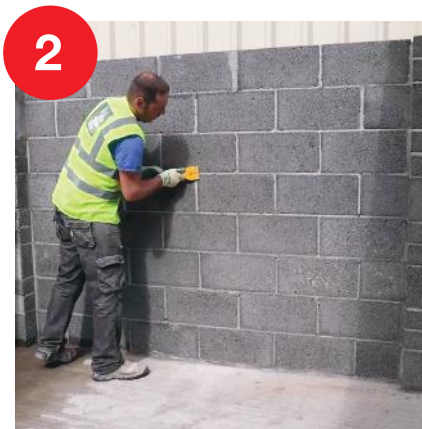


2 Smooth and clean wall



3 Check wall alignment, both vertical and horizontal




4 Mix adhesive

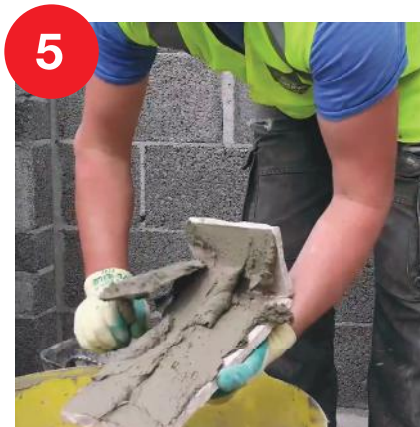

5 Apply adhesive to back of stone



6 Apply the stone, starting at a corner

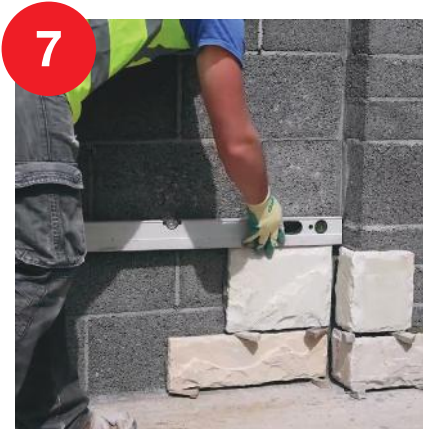

7
Check alignment with spirit level (use wooden spacers to adjust)




8
Cut stone as needed. Use bolster chisel or a small grinder




9
Trim edges with hammer for natural look



10
Allow 8 hours drying time for adhesive

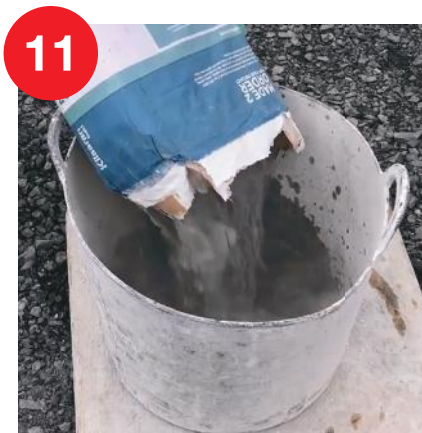

11
Mix pointing mortar

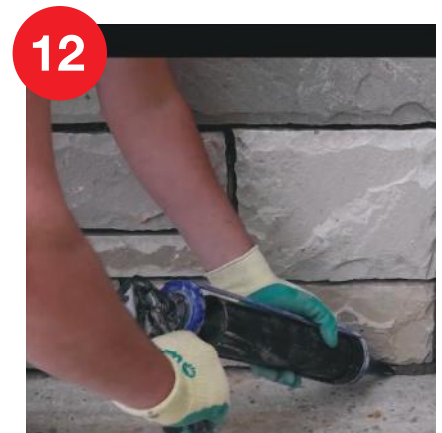

12
Use a pointing gun to apply the pointing mortar



13
Allow pointing to dry (2 to 4 Hours)



14
Rake pointing mortar when just dry, but not hard.



15
Finished wall. **All Done!**

For more information please visit our website at www.thinstoneireland.ie or call **Declan Conway** on **087-131-8881**