





Natural Stone, Beautiful Home

# How to fit ThinStone


## Tools needed

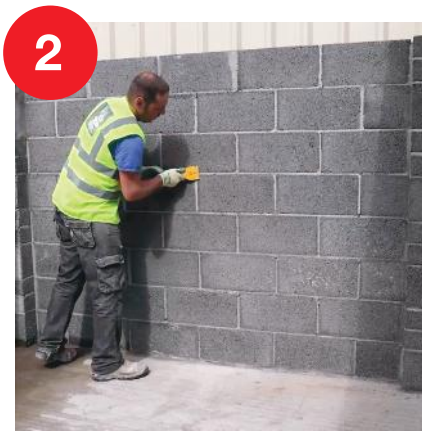

Smooth and clean wall

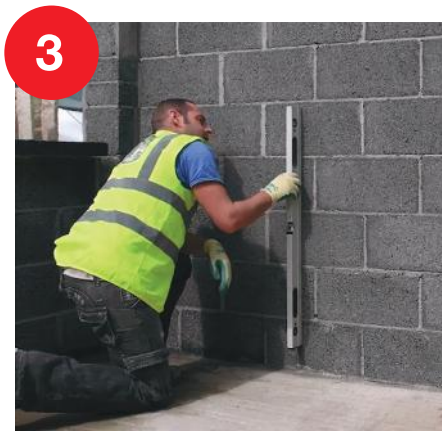

Check wall alignment, both vertical and horizontal

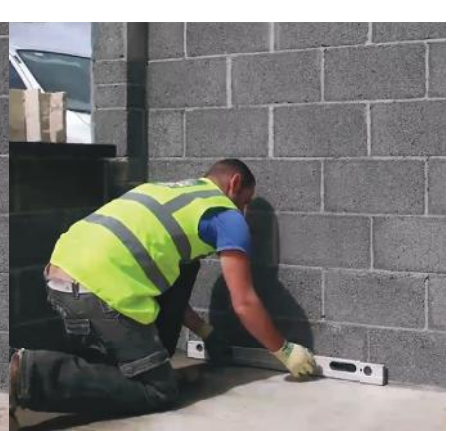


Mix adhesive



Apply adhesive to back of stone



Apply the stone, starting at a corner

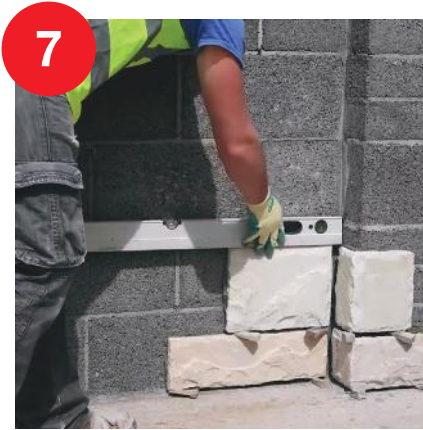

7 Check alignment with spirit level (use wooden spacers to adjust)




8 Cut stone as needed. Use bolster chisel or a small grinder




9 Trim edges with hammer for natural look



10 Allow 8 hours drying time for adhesive

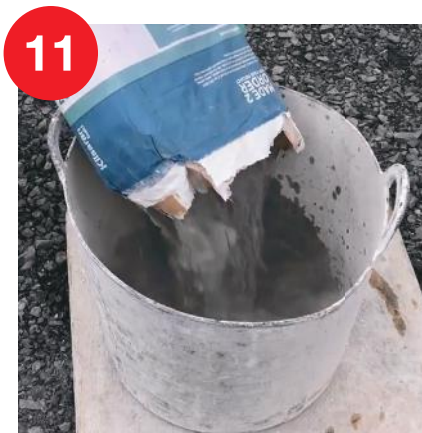

11 Mix pointing mortar

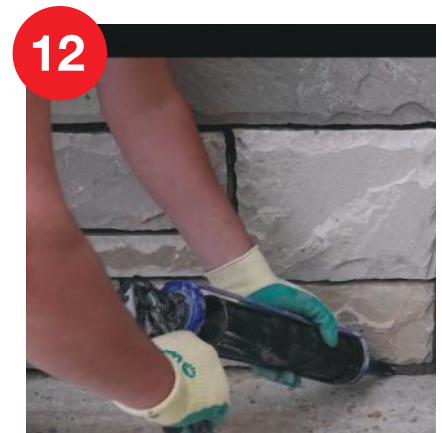

12 Use a pointing gun to apply the pointing mortar



13 Allow pointing to dry (2 to 4 Hours)



14 Rake pointing mortar when just dry, but not hard.



15 Finished wall. **All Done!**

For more information please visit our website at [www.thinstoneireland.ie](http://www.thinstoneireland.ie) or call **Declan Conway** on **087-131-8881**