



Natural Stone, Beautiful Home

Fixing ThinStone to External Insulation

Homes with **External Insulation** are becoming more popular as more and more people are recognising the improved thermal comfort and reduced energy consumption.

Now, with **ThinStone**, you can combine this modern building technology with traditional stonework for an attractive and natural finish to your home.

For more information please contact us at:

Address:

Castlebar Rd, Drummindoo, Westport, Co. Mayo, F28 KD28

Office:

Tel: 087 131 8881

Mobile:

Tel: 087 131 8881

Email:

stone@thinstoneireland.ie

Give us a call to arrange a visit to our showroom, please call in advance. 5 mins from Westport, 60 mins from Galway.

www.thinstoneireland.ie


1 Trowel a layer of mesh into the base coat as normal



2 Using mushroom fixings, add 9-12 pieces per square metre area minimum...



3 Install a mushroom fixing through the mesh, insulation and into the load bearing structure

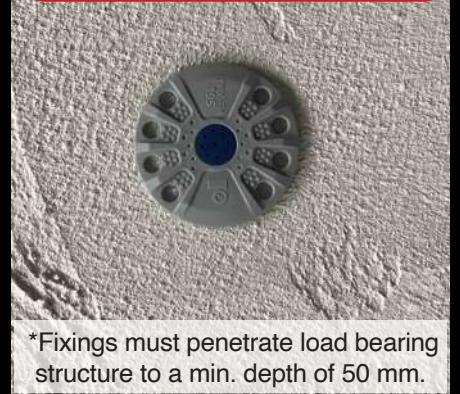

*Fixings must penetrate load bearing structure to a min. depth of 50 mm.

4 Base coat ready for stone to be added



5 Add ThinStone with a pointing gap of 18 mm minimum



6 Finished stonework



The above fitting details apply to our LightStone range of natural stone cladding. This includes Creggaun Sandstone, Errisbeg Sandstone and Glenmore Limestone.